


MOUNTING ADAPTABEL® TO OUTLET BOX ADAPTABEL CATALOG SERIES 332 AND 340

1. Do NOT remove gong. Remove backplate from Adaptabel by loosening bottom screw. (4" bell: loosen screws top and bottom.)
2. Mount plate on:
 - a. Any outlet box or cover having single-gang opening. Use #6 screws in attached bag.
 - b. 3-¼", 3½", 4" octagon or 4" square box (4" bell requires a single-gang plaster cover). Use #8 screws supplied with box.
3. Connect wires, hook bell on hanger, and tighten screw. (4" bell: connect wires, press bell on backplate and tighten screws top and bottom.)



Adaptabel
Catalog 340-6
Shown

This installation is suitable for average outdoor conditions. Where Underwriters' Weatherproof Listing is required and for severe weather conditions, use rigid conduit with Weatherproof Backbox #349. (4" bells: Weatherproof Backbox #348.)